



INSTALLATION INSTRUCTIONS ZEROFLUSH WATERLESS URINALS

Before installing the urinal, make sure drain line is clean and clear of debris

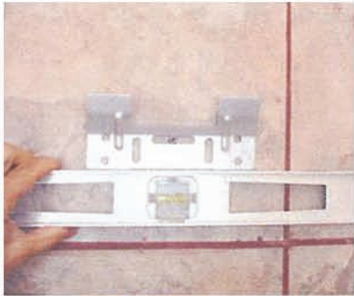


Wall Bracket




Drain Insert
Key
Odour Barrier

Replacing a Urinal
 Shut off and cap water supply.
 Remove existing hardware, caulk and grout.
 Remove all traps and conventional siphons.
 Verify there is enough room for the new urinal.

1 Fix the wall bracket. Ensure it is level, centred and located at the correct height. Normal urinal fitting height is 610mm from floor to lip of bowl. (For junior use this changes to 510mm)..

2 After hanging urinal on wall bracket connect waste pipe to 40mm urinal outlet by either compression joint or ABS glued joint. (If gluing use ABS glue only). Note: No traps should be fitted as these are already within the urinal housing.



3 Perform a Water test for a good flow and verify there are no leaks

Secure urinal on the bottom.

Perform set-up following the set-up instructions.

Finish installation by caulking around the bowl.